

APPENDIX E STOWAGE AND SIGN GUIDE

E-1. SCOPE


This appendix shows the location for stowage of equipment and material required to be carried on M998, A1, A2 series, and M1123 vehicles.

E-2. GENERAL

The equipment stowage locator is designed to help inventory items required for safe and efficient operation. This equipment locator is representative of BII and applicable AAL stowage on M998, A1, A2 series, and M1123 vehicles. Refer to appendix F for specific deviations from this equipment locator for other vehicles and to para. 2-2 for additional information concerning stowage of equipment.

E-3. STOWAGE LOCATIONS

Applicable models: All

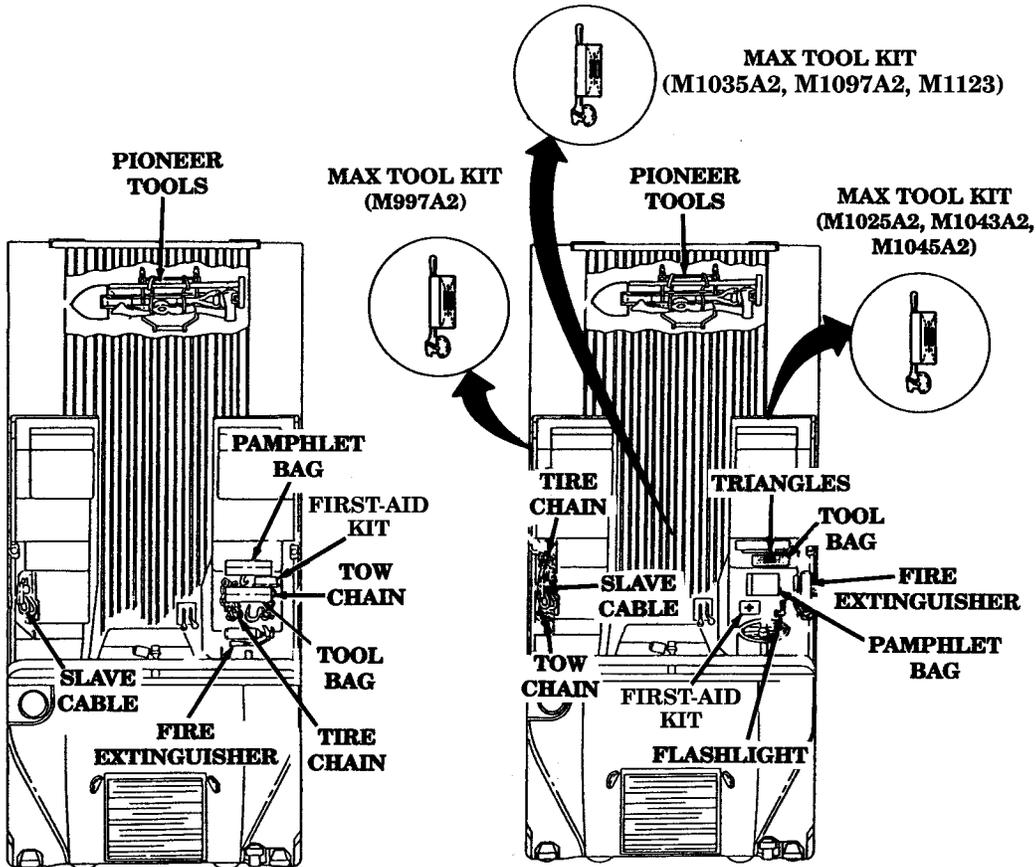



(All except M1123, A1, and A2 vehicles)

(M1123, A1 and A2 vehicles)

E-4. SIGN GUIDE


LOCATION OF CREW AREA AND EXTERIOR DECALS AND DATA PLATES		
KEY	ITEM	VEHICLE APPLICATION
1	Decal, caution, windshield cleaning	M996, M996A1, M997, M997A1, M997A2, M1025, M1025A1, M1025A2, M1026, M1026A1, M1036, M1043, M1043A1, M1043A2, M1044, M1044A1, M1045, M1045A1, M1045A2, M1046, M1046A1
2	Plate, identification, ignition	All
3	Decal, neutral start, warning	All
4	Plate, instruction, steering wheel lock	All
5	Decal, speedometer	All
6	Decal, warning, hand throttle	All
7	Plate, identification, heater, defroster, temperature, fan	All
8	Decal, identification, M16 rifle, front	M966, M966A1, M1025, M1025A1, M1025A2, M1026, M1026A1, M1036, M1043, M1043A1, M1043A2, M1044, M1044A1, M1045, M1045A1, M1045A2, M1046, M1046A1, M1121
9	Plate, instruction, heater air control	All
10	Decal, service and data manuals	All
11	Decal, procedures, tiedown	All
12	Plate, instruction, seatbelt retractor (front)	All
13	Plate, instruction, operating	All
14	Decal, identification, M16 rifle, rear	M1043, M1043A1, M1043A2, M1044, M1044A1
15	Plate, instruction, seatbelt retractor (rear)	All except M996, M996A1, M997, M997A1, M997A2, M1035, M1035A1, M1035A2, M1037, M1042
16	Plate, instruction, driver's seat adjustment	All
17	Plate, identification, vehicle	All
18	Decal, identification, fire extinguisher	All
19	Plate, information, deep water fording	Vehicles so equipped
20	Plate, sling and tiedown/weights and dimensions data	All
21	Plate, instruction, battery cable connections	All
22	Decal, 24V	All
23	Plate, identification, slave receptacle	All

E-4. SIGN GUIDE (Cont'd)

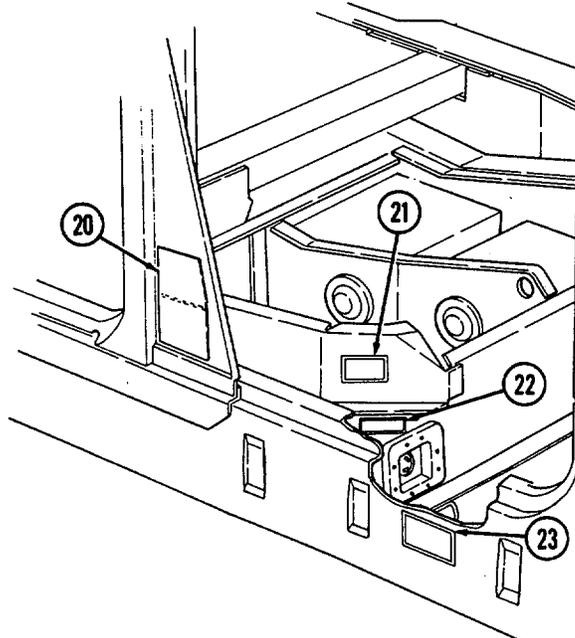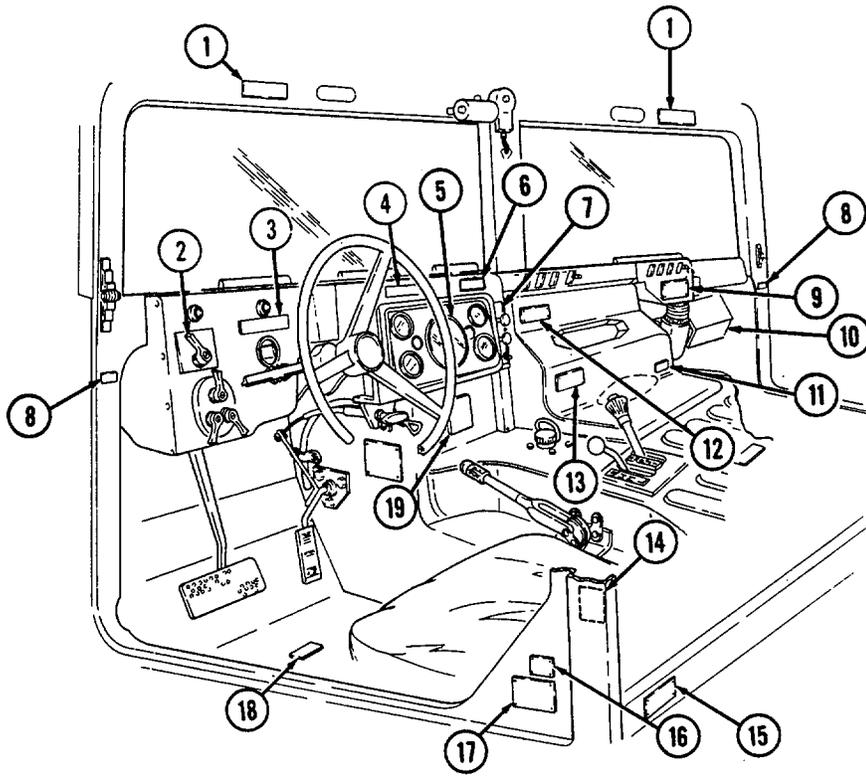



E-4. SIGN GUIDE (Cont'd)

LOCATION OF CREW AREA AND EXTERIOR DECALS AND DATA PLATES		
KEY	ITEM	VEHICLE APPLICATION
1	Decal, warning, fan blade	All
2	Decal, no step	All
3	Decal, sling	All
4	Decal, no step	All
5	Decal, identification, USMC registration number	USMC vehicles only
6	Decal, warning, surge tank cap	All
7	Decal, no step	All
8	Decal, instruction, sling guide	All except M996, M996A1, M997, M997A1, M1097A2, M1037, M1042
9	Decal, identification, sling and tiedown	All except M996, M996A1, M997, M997A1, M997A2, M1037, M1042
10	Decal, identification, star	Army only, except for CONUS vehicles and M996, M996A1, M997, M997A1, M997A2, M1035, M1035A1, M1035A2
11	Decal, tire pressure, rear	All
12	Decal, identification, vehicle number	Army vehicles only
13	Decal, tire pressure, front	All
14	Decal, identification, tiedown	All

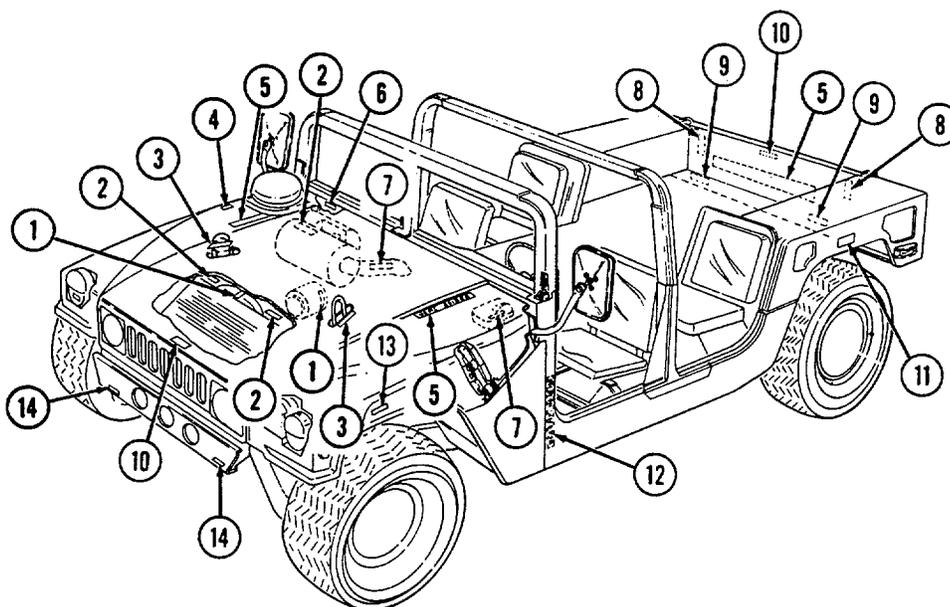


E-4. SIGN GUIDE (Cont'd)

LOCATION OF CREW AREA AND EXTERIOR DECALS AND DATA PLATES		
KEY	ITEM	VEHICLE APPLICATION
1	Plate, NBC fuse control box	M996, M996A1, M997, M997A1, M997A2
2	Plate, NBC master control switch	M996, M996A1, M997, M997A1, M997A2
3	Decal, sling	M996, M996A1, M997, M997A1, M997A2, M1037, M1042
4	Decal, tiedown	M996, M996A1, M997, M997A1, M997A2, M1037, M1042
5	Decal, 24V	All

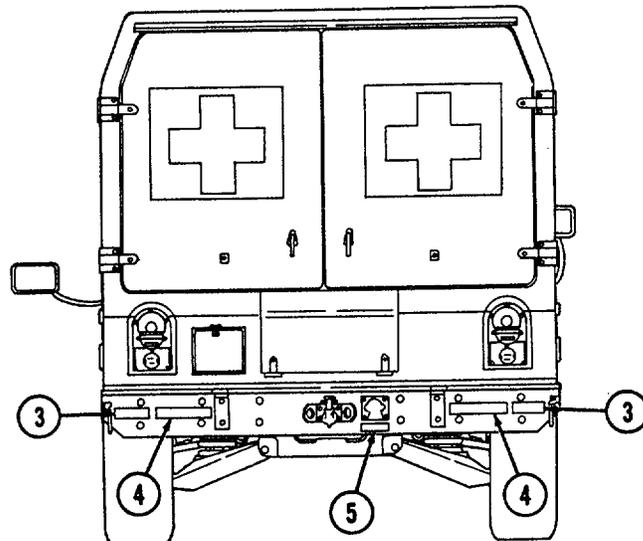
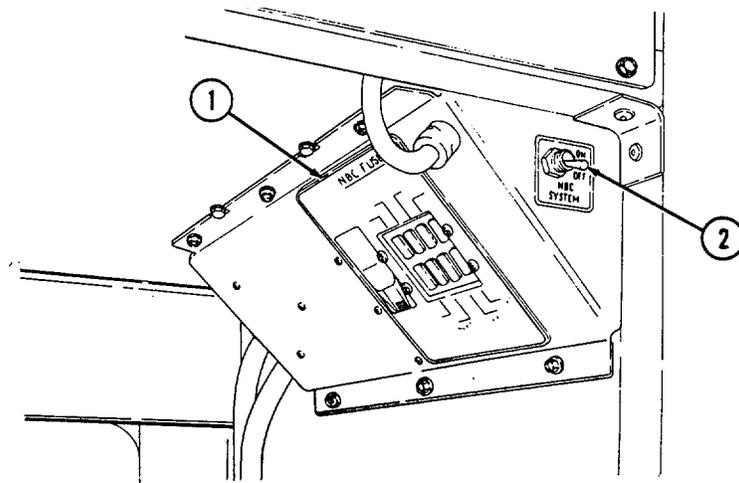


E-4. SIGN GUIDE (Cont'd)


LOCATION OF CREW AREA AND EXTERIOR DECALS AND DATA PLATES		
KEY	ITEM	VEHICLE APPLICATION
1	Decal, warning, body heater	M996, M996A1, M997, M997A1, M997A2
2	Plate, control system heating/ventilation	M996, M996A1
3	Plate, heater/air-conditioner/vent operation	M997, M997A1, M997A2
4	Plate, 24-volt outlet	M996, M996A1, M997, M997A1, M997A2
5	Plate, harness circuit connections control box	M996, M996A1, M997, M997A1, M997A2
6	Plate, lights, 24-volt DC, fuse control	M996, M996A1, M997, M997A1, M997A2

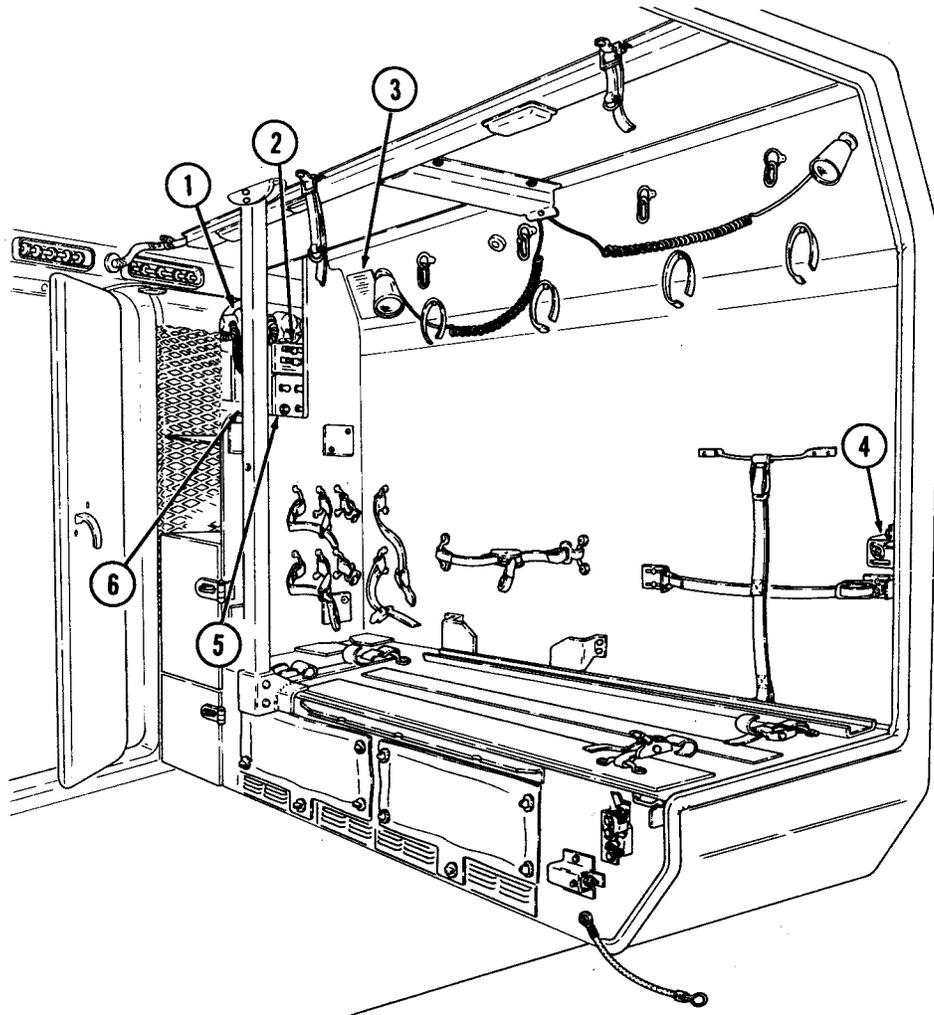


TOW CARRIER (M966, M966A1, M1036, M1045, M1045A1, M1045A2, M1046, M1046A1, AND M1121)	
STOWAGE LOCATION DECALS	
KEY	ITEM
1	Deleted
2	Decal, Missile Guidance Set (MGS)
3	Decal, traversing unit
4	Decal, radiac meter
5	Decal, night vision goggles
6	Decal, night sight
7	Decal, night sight coolant
8	Decal, boresight collimator
9	Decal, night sight batteries
10	Decal, combat rations
11	Decal, daysight
12	Decal, fuel can
13	Decal, tripod
14	Decal, telephone
15	Decal, cable reel
16	Decal, ammunition
17	Decal, MGS battery
18	Decal, water can
19	Decal, NBC overgarments
20	Decal, NBC chemical mask
21	Decal, no hold warning spring cover
22	Decal, nose end
23	Decal, launch tube

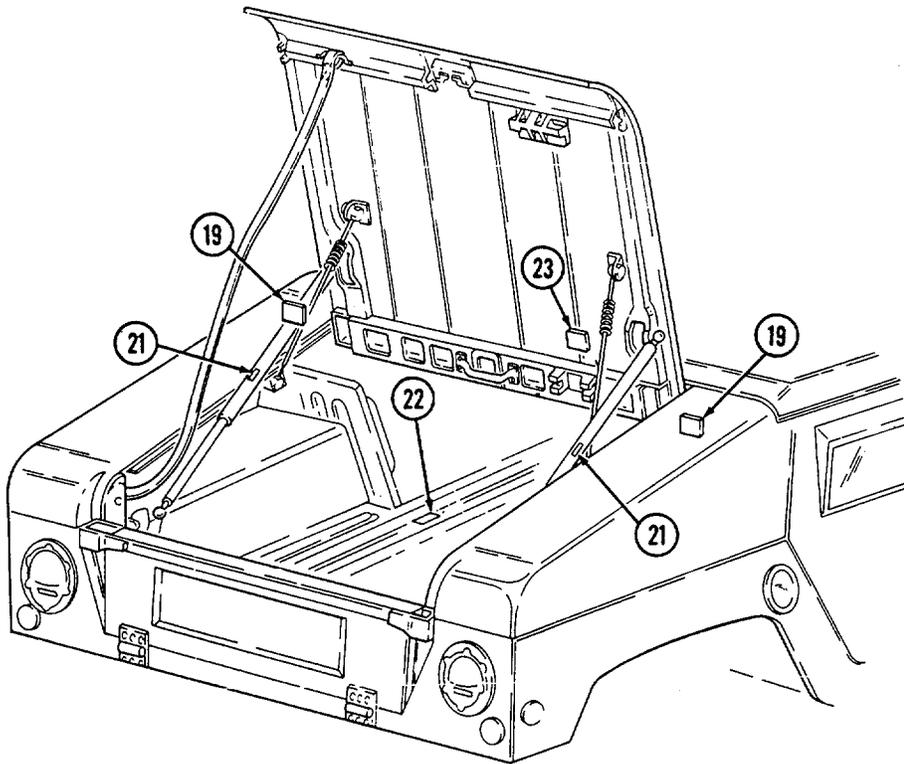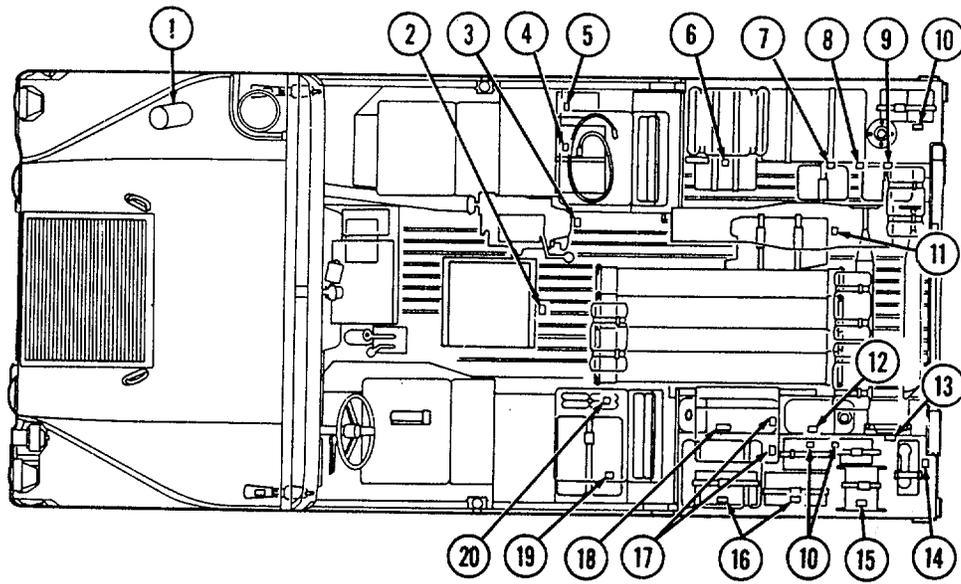

E-4. SIGN GUIDE (Cont'd)

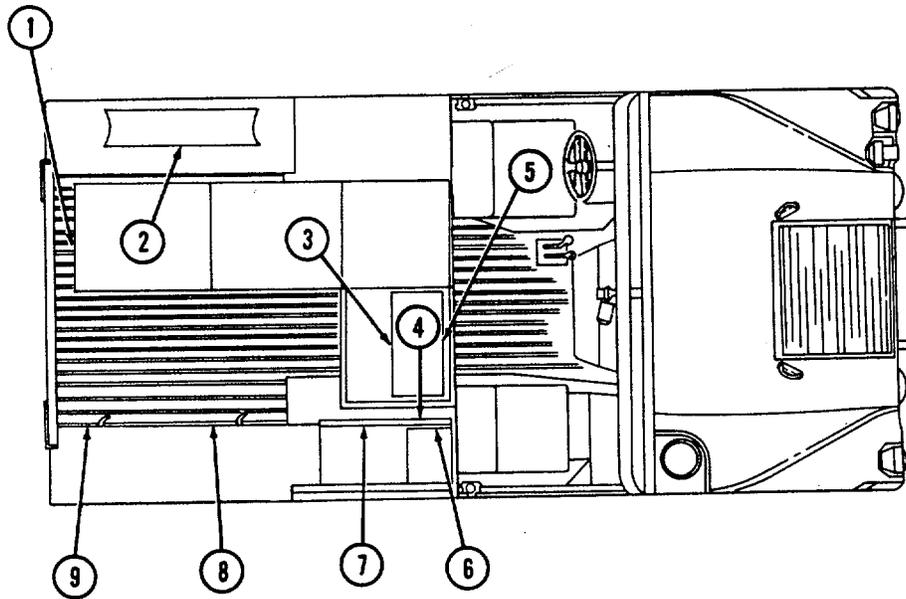


CARGO/TROOP CARRIER (M998, M998A1, M1038, AND M1038A1) WITH 81MM MORTAR KIT INSTALLED	
KEY	ITEM
1	Decal, mortar base plate
2	Decal, bipod
3	Decal, 4 round ready rack
4	Decal, M16 chest
5	Decal, aiming post
6	Decal, M14 chest
7	Decal, tool chest
8	Decal, mortar launch tube
9	Decal, cleaning staff

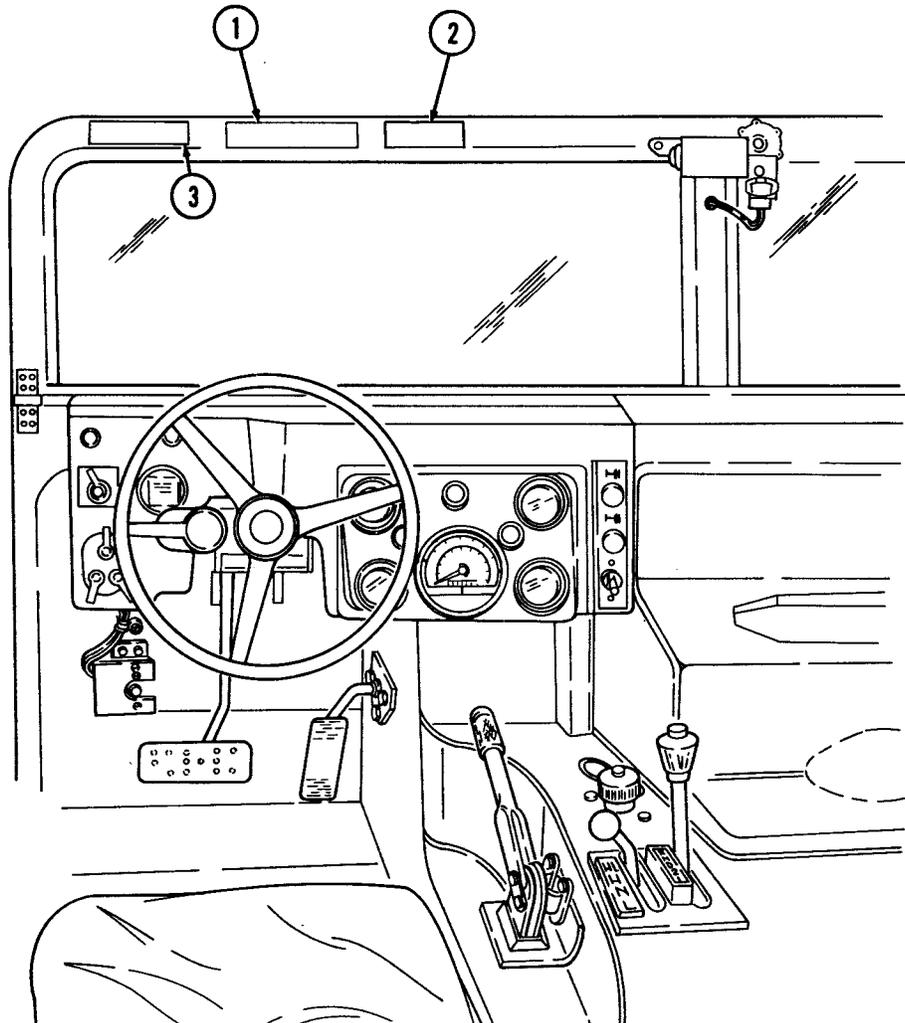

LOCATION OF TRANSPORTING AMMUNITION DECAL AND HEARING PROTECTION DECAL	
KEY	ITEM
1	Decal, warning, transporting ammunition (M1097, M1097A1, M1097A2, and M1123 with Howitzer Prime Mover Kit installed)
2	Decal, caution, hearing protection (M1097 only)
3	Decal, caution, hearing protection (All A1, A2, and M1123 vehicles)

E-4. SIGN GUIDE (Cont'd)

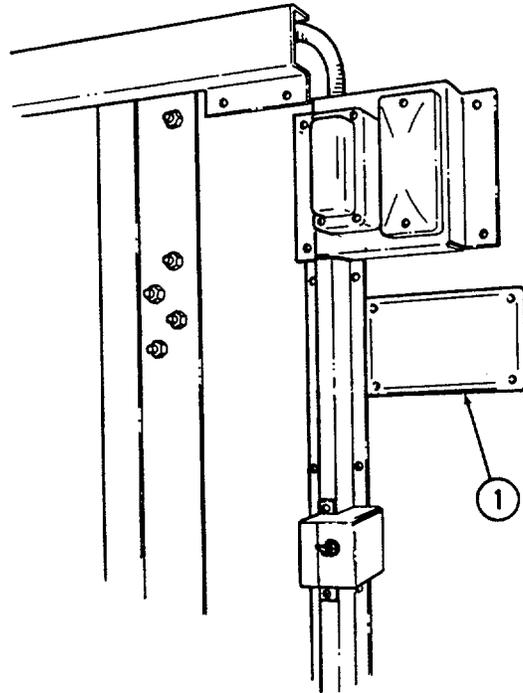

CARGO/TROOP CARRIER (M998, M998A1, M1038, AND M1038A1) WITH WINTERIZATION KIT INSTALLED	
KEY	ITEM
1	Plate, instruction, heater operating instructions